




## RESEARCH ARTICLE

# *In vitro* efficacy of a copper iodine complex PPE disinfectant for SARS-CoV-2 inactivation [version 1; peer review: 1 approved, 1 approved with reservations]

Emily Mantlo<sup>1</sup>, Tanya Rhodes<sup>2</sup>, Jenny Boutros<sup>3</sup>, Laura Patterson-Fortin<sup>3</sup>, Alex Evans<sup>4</sup> , Slobodan Paessler<sup>1</sup>

<sup>1</sup>University of Texas Medical Branch at Galveston, Galveston, Texas, USA

<sup>2</sup>Clyra Medical Technologies, Inc., Tampa, Florida, USA

<sup>3</sup>BioLargo Water, Inc., Edmonton, Alberta, Canada

<sup>4</sup>BioLargo, Inc., Westminister, California, USA

**V1** First published: 03 Jul 2020, 9:674  
<https://doi.org/10.12688/f1000research.24651.1>  
Latest published: 03 Jul 2020, 9:674  
<https://doi.org/10.12688/f1000research.24651.1>

## Abstract

**Background:** The ability to protect workers and healthcare professionals from infection by SARS-CoV-2, the virus that causes coronavirus disease 2019 (COVID-19), is of great concern. Hospitals, nursing homes and employers are adopting infection control strategies based on guidance from leading public health organizations such as the CDC, OSHA, FDA, and other government bodies. Certain hard surface disinfectants are effective against SARS-CoV-2 but are not suitable for use on skin or personal protective equipment (PPE) that comes into contact with skin. Furthermore, near-ubiquitous alcohol-based hand sanitizers are acceptable for use on skin, but they are not suitable for use on PPE. PPE, especially masks, are also commonly being used for longer durations than normal. There is a need for new products and techniques that can effectively disinfect PPE during wear time without having detrimental effects on surrounding skin. Clyraguard spray is a novel copper iodine complex designed to be used on non-critical PPE.

**Methods:** In this study, the Clyraguard copper iodine complex was tested for its ability to inactivate SARS-CoV-2 in solution.

**Results:** These data indicate the product to be effective in reducing SARS-CoV-2 titers in a time-dependent manner, with the virus being reduced below the detection limits within 30 minutes.



**Conclusions:** These results suggest that Clyraguard may be an effective tool for mitigating cross-contamination of non-critical PPE that may come into contact with SARS-CoV-2.

## Keywords

COVID, PPE, iodine, disinfection, decontamination, virus

## Open Peer Review


Reviewer Status  

	Invited Reviewers	
	1	2
<b>version 1</b> 03 Jul 2020	 report	 report


1. **Ilya Frolov**, University of Alabama at Birmingham, Birmingham, USA

2. **Paul Dabisch**, Operated by BNBI for the US Department of Homeland Security Science and Technology Directorate, Frederick, USA

Any reports and responses or comments on the article can be found at the end of the article.

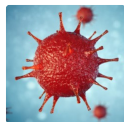

This article is included in the [Disease Outbreaks](#) gateway.

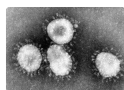

This article is included in the [Coronavirus](#) collection.

**Corresponding author:** Slobodan Paessler ([slpaessl@utmb.edu](mailto:slpaessl@utmb.edu))

**Author roles:** **Mantlo E:** Data Curation, Investigation, Methodology, Visualization, Writing – Original Draft Preparation; **Rhodes T:** Conceptualization, Formal Analysis, Methodology, Writing – Review & Editing; **Boutros J:** Formal Analysis, Writing – Original Draft Preparation, Writing – Review & Editing; **Patterson-Fortin L:** Writing – Original Draft Preparation, Writing – Review & Editing; **Evans A:** Methodology, Project Administration, Writing – Original Draft Preparation, Writing – Review & Editing; **Paessler S:** Conceptualization, Formal Analysis, Investigation, Methodology, Project Administration, Resources, Supervision, Validation, Writing – Review & Editing

**Competing interests:** Studies conducted in the laboratory of Dr. Slobodan Paessler at Galveston National Laboratory at the University of Texas Medical Branch described herein were funded by Clyra Medical Technologies, Inc., who developed and manufactures Clyraguard, and were requested to be conducted by Clyra Medical Technologies, Inc. Clyra staff who are listed as authors on this paper do not themselves have any financial commitments to the research described herein, but are employed as staff or consultants by Clyra.

**Grant information:** This work was funded by Clyra Medical Technologies, Inc.

*The funders had no role in study design, data collection and analysis, decision to publish, or preparation of the manuscript.*

**Copyright:** © 2020 Mantlo E *et al.* This is an open access article distributed under the terms of the [Creative Commons Attribution License](#), which permits unrestricted use, distribution, and reproduction in any medium, provided the original work is properly cited.

**How to cite this article:** Mantlo E, Rhodes T, Boutros J *et al.* ***In vitro* efficacy of a copper iodine complex PPE disinfectant for SARS-CoV-2 inactivation [version 1; peer review: 1 approved, 1 approved with reservations]** F1000Research 2020, 9:674 <https://doi.org/10.12688/f1000research.24651.1>

**First published:** 03 Jul 2020, 9:674 <https://doi.org/10.12688/f1000research.24651.1>

## Introduction

In late 2019, the world saw the spread of a novel coronavirus (SARS-CoV-2) that caused a global pandemic (ongoing as of this writing) that has claimed the lives of more than 260,000 people and infected 3.8 million as of May 2020 (Johns Hopkins Coronavirus Resource Center, 2020). The spread of this virus has led governments worldwide to implement unprecedented and far-reaching public health guidelines and lockdowns in an effort to flatten the infection curve and reduce the burden on their respective healthcare systems. Healthcare workers currently have the highest risk of exposure and can easily become vectors of viral transmission. On April 16<sup>th</sup> 2020, the United Kingdom cabinet reported that 16.2% of positive cases were critical workers in NHS (Centre for Evidence-Based Medicine, 2020), and the United States-based CDC reported that up to 11% of positive cases were healthcare workers in some states (CDC, 2020a).

Symptomatic COVID-19 patients display symptoms including a dry cough, fever, shortness of breath and sore throat (CDC, 2020b), and in severe cases can experience severe pneumonia, pulmonary edema, organ failure, and death (Chen *et al.*, 2020). The virus incubation period varies from 3 to 20 days, during which time a patient can be infectious while asymptomatic, as some evidence suggests (Bai *et al.*, 2020). While all modes of transmission for SARS-CoV-2 are not completely understood, it is generally believed that the primary mechanism of transmission is through micron-sized droplets and aerosols produced when an infected person, sneezes, coughs, talks or breathes (WHO, 2020a). Accordingly, public health organizations around the world are urging citizens to practice physical distancing (i.e., “social distancing”), use facemasks when in public, frequently wash their hands, and disinfect commonly touched areas in their surroundings (CDC, 2020c; WHO, 2020b).

In most countries, many front-line healthcare professionals are required to wear approved N95 masks as well as face shields to protect themselves against infectious droplets and cross-contamination (CDC, 2020d). However, due to shortages of N95 masks and other protective PPE, health organizations including the CDC are now recommending extended use and reuse of PPE including N95 masks. These new recommended practices may put healthcare workers at additional risk if the PPE cannot be effectively disinfected between uses. Therefore, effective disinfection of protective masks and other PPE before reuse is critical (CDC, 2020e). One recent study (Fischer *et al.*, 2020) validated several CDC-recommended PPE decontamination techniques by demonstrating effective disinfection of N95 masks using UV-radiation, dry heat, and hydrogen peroxide vapor application. However, authors showed that while ethanol was effective in disinfecting N95 masks, it also led to reduced filtration capacity in the mask. Another study suggested that ethanol- and chlorine-based disinfectants are not suitable for decontamination due to their capacity to adsorb on fabric material and interfere with their electrostatic properties, thereby reducing filtration capacity (Liao *et al.*, 2020). In keeping with these findings, bleach, sanitizing wipes, and ethyl oxides are not recommended for use to decontaminate masks (SAGES, 2020).

Recommended PPE decontamination methods (UV, dry heat, hydrogen peroxide vapors) cannot, however, be easily applied during times of extended daily use of PPE, warranting the need for new or additional disinfection methods that can be applied “on the go” in these settings without causing harm to adjacent skin.

Iodine-containing solutions such as povidone iodine (PVP-I) have been proven effective as surface disinfectants against a wide variety of viruses including influenza A, poliovirus, adenovirus type 3, mumps, SARS, MERS, and HIV (Eggers *et al.*, 2015; Kawana *et al.*, 1997; Wada *et al.*, 2016), with some indication of greater viricidal spectrum of activity compared to other commercially available disinfectants. Furthermore, iodine-based formulations have also been shown to be an effective preventative method to reduce upper respiratory tract infections and oral tract pathogens (Eggers *et al.*, 2018; Sakai *et al.*, 2008).

Clyraguard copper iodine complex, developed by Clyra Medical Technologies, Inc., is a novel FDA-registered product intended to be used for decontaminating non-critical PPE. The formula has proven antimicrobial activity (FDA submission data, see [here](#)) and is cleared for use on skin and wounds. In contrast, other iodine-based products, such as Lugol’s Iodine and PVP-I, may cause staining and skin sensitivity.

In this study, Clyraguard copper iodine complex was assessed for its efficacy in inactivating SARS-CoV-2 using a Vero cell monolayer infection model to provide a basis for whether or not Clyraguard may represent a potentially effective tool to disinfect and prolong the useful protective life of PPE, as well as to provide additional antiviral protection to PPE such as masks.

## Methods

### Cell lines and cell growth

Vero cells were obtained from ATCC and grown in DMEM (Corning) containing 1x L-glutamine and 1% MEM vitamins, and supplemented with 10% FBS (Gibco) and 1% penicillin/streptomycin (Gibco). Cells were incubated at 37°C in 5% CO<sub>2</sub>. Cells were used at 85–95% confluent growth.

### Virus stocks

The SARS-CoV-2 (USA-WA1/2020) virus was obtained from The World Reference Center for Emerging Viruses and Arboviruses (WRCEVA), University of Texas Medical Branch, Galveston, TX. All experiments involving infectious virus were conducted by S.P.’s laboratory at the University of Texas Medical Branch (Galveston, TX) in approved biosafety level 3 laboratories in accordance with institutional health and safety guidelines and federal regulations.

### Preparation of SARS-CoV-2 virus stocks

From the original stock, SARS-CoV-2 was propagated for one passage in infection medium (DMEM containing 1x L-Glutamine and 1% MEM vitamins, supplemented with 1% penicillin/streptomycin (Gibco) and 2% FBS) at 37°C in 5% CO<sub>2</sub>. Briefly, SARS-CoV-2 was added at a MOI of 0.01 to Vero cells and incubated 1 hour at 37°C. Viral inoculum was removed, and fresh infection medium added. Cells were incubated for an additional

48 hours before supernatant was collected. Supernatant was centrifuged for 5 minutes at 3000 rpm to remove cell debris. Virus stocks were stored at -80°C at a concentration of 1x10<sup>6</sup> median tissue culture infectious dose (TCID<sub>50</sub>) per mL.

**Determination of viral titers**

Viral titers were measured by TCID<sub>50</sub> on Vero Cells in 96-well plates. Each log<sub>10</sub> dilution (10<sup>-1</sup> through 10<sup>-6</sup>) of the virus was inoculated in quadruplicates. On day 4 post-infection, the cells were fixed with 10% formalin for 45 minutes and subsequently stained with crystal violet. Cleared wells were quantified to calculate titer.

**Virus inactivation using Clyra or controls**

Aliquots of stock virus (10 µl) were mixed with 90 µl of Clyra, diluted Clyra, or control solutions. Clyra was mixed either 1:10 or 1:100 with sterile saline for dilution. Room temperature water was used as a negative control for virus inactivation, while boiling water (water pre-heated to 100°C) was used as a positive control. All mixtures were incubated for 30 seconds, 10 minutes, 30 minutes, or 60 minutes at room temperature, at which time 900 µl infection medium was added to neutralize antiviral activity. Subsequently, the SARS-CoV-2 viral titer (TCID<sub>50</sub>/mL) for each test substance was determined. The experiment was conducted in triplicate.

**Statistical analysis**

Statistical significance was determined using Student’s t-test, conducted using GraphPad Prism (software version 8.3.0). A p-value of 0.05 or below was considered statistically significant.


**Results**

In this study, the ability of Clyraguard to inactivate SARS-CoV-2 at various timepoints and at various concentrations was assessed (Figure 1; Table 1). While diluted Clyraguard was unable to inactivate SARS-CoV-2 after any length of time, undiluted Clyraguard was effective at significantly reducing viral titers after just 10 minutes of incubation. After incubation with undiluted Clyraguard for 10 minutes, viral titers dropped by 2 logs (one-tailed t-test p-value = 0.0140). Furthermore, after incubation with undiluted Clyraguard for either 30 minutes or 60 minutes, viral titers dropped below the limit of detection (<75 TCID<sub>50</sub> per ml).

**Discussion**

In this study, Clyraguard copper iodine complex was assessed for its ability to inactivate SARS-CoV-2. These data demonstrate that the product has significant viricidal activity against SARS-CoV-2 within 10 minutes and yields complete SARS-CoV-2 deactivation by 30 minutes.

Antiviral activity against human CoV viruses including SARS-CoV and MERS-CoV has been previously been demonstrated using iodine (Eggers *et al.*, 2015; Eggers *et al.*, 2018). The mechanism of action is not widely understood but researchers have hypothesized that iodine attacks viruses in multiple ways, attacking the protein structure and interfering with hydrogen

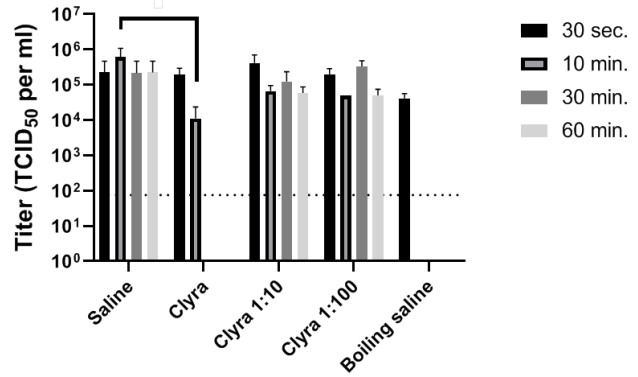

**Figure 1. Inactivation of SARS-CoV-2 using Clyraguard.** One part SARS-CoV-2 by volume was added to nine parts Clyraguard, diluted Clyraguard, or control saline solutions. Solutions were incubated for the indicated times before titration via TCID<sub>50</sub>.

**Table 1. Average SARS-CoV-2 titer (TCID<sub>50</sub>/ml) calculated from three replicates.**

	30 sec.	10 min.	30 min.	60 min.
Saline	2.25 x 10 <sup>5</sup>	6.08 x 10 <sup>5</sup>	2.17 x 10 <sup>5</sup>	2.25 x 10 <sup>5</sup>
Clyraguard	1.92 x 10 <sup>5</sup>	1.12 x 10 <sup>4</sup>	<7.5 x 10 <sup>1</sup>	<7.5 x 10 <sup>1</sup>
Clyraguard 1:10	4.17 x 10 <sup>5</sup>	6.67 x 10 <sup>4</sup>	1.25 x 10 <sup>5</sup>	5.83 x 10 <sup>4</sup>
Clyraguard 1:100	2.00 x 10 <sup>5</sup>	5.00 x 10 <sup>4</sup>	3.33 x 10 <sup>5</sup>	5.00 x 10 <sup>4</sup>
Boiling saline	4.17 x 10 <sup>4</sup>	<7.5 x 10 <sup>1</sup>	<7.5 x 10 <sup>1</sup>	<7.5 x 10 <sup>1</sup>

bonding associated with cysteine, histidine, and tyrosine, thus altering virus membrane structure and causing inhibition of viral release and spread from infected cells (Qin, 2009).

Iodine-based materials that have shown effective antiviral activity such as PVP-I and Lugol’s solution also exhibit toxicity concerns and can only be tolerated on skin for short periods of time. The copper iodine complex investigated in this study has also been tested according to ISO 10993 standards (FDA submission data, see [here](#)) and found to be safe for skin and wounds, suggesting that it may represent a potential alternative to current iodine-based regimens.

In addition, long-term antimicrobial performance studies with organisms including *Enterococcus faecium*, *Staphylococcus aureus*, *Klebsiella pneumoniae*, *Acinetobacter baumannii*, *Pseudomonas aeruginosa*, *Enterobacter aerogenes*, *Bacillus fragilis* (FDA submission data, see [here](#)) have been conducted with the Clyraguard formula, wherein it was found to be efficacious for up to 72 hours. It is therefore recommended that further studies be carried out under good laboratory practices to directly determine any extended activity against the SARS-CoV-2 virus. This would verify the potential extended use for PPE against SARS-CoV-2, potentially providing additional protection

for healthcare professionals working during the COVID-19 pandemic.

This study demonstrates clear evidence to the potential suitability of the copper iodine complex (Clyraguard) for decontaminating non-critical PPE to help mitigate cross-contamination of SARS-CoV-2.

## Data availability

### Underlying data

Figshare: *In vitro* efficacy of a copper iodine complex PPE disinfectant for SARS-CoV-2 inactivation - Raw Data in CSV. <https://doi.org/10.6084/m9.figshare.12493682.v1> (Mantlo & Paessler, 2020).

This project contains the raw viral titers for each repeat produced in this experiment.

Data are available under the terms of the [Creative Commons Zero “No rights reserved” data waiver](#) (CC0 1.0 Public domain dedication).

## Acknowledgements

We thank Drs. Kenneth Plante (The World Reference Center for Emerging Viruses and Arboviruses, UTMB) and Natalie Thornburg from the CDC for providing the SARS-CoV-2 stock virus. E.K.M. was supported by NIH T32 training grant AI060549.

## References

- Bai Y, Yao L, Wei T, *et al.*: **Presumed Asymptomatic Carrier Transmission of COVID-19.** *JAMA.* 2020; **323**(14): 1406–1407.  
[PubMed Abstract](#) | [Publisher Full Text](#) | [Free Full Text](#)
- CDC COVID-19 Response Team: **Characteristics of Health Care Personnel with COVID-19 — United States, February 12–April 9, 2020.** *MMWR Morb Mortal Wkly Rep.* 2020a; **69**(15): 477–481.  
[PubMed Abstract](#) | [Publisher Full Text](#)
- Centers for Disease Control and Prevention: **Symptoms of Coronavirus.** Accessed 7 May, 2020b.  
[Reference Source](#)
- Centers for Disease Control and Prevention: **How to Protect Yourself & Others.** Accessed 7 May, 2020c.  
[Reference Source](#)
- Centers for Disease Control and Prevention: **Strategies to Optimize the Supply of PPE and Equipment.** Accessed 7 May, 2020d.  
[Reference Source](#)
- Centers for Disease Control and Prevention: **Decontamination and Reuse of Filtering Facepiece Respirators.** Access 7 May, 2020e.  
[Reference Source](#)
- Chen N, Zhou M, Dong X, *et al.*: **Epidemiological and clinical characteristics of 99 cases of 2019 novel coronavirus pneumonia in Wuhan, China: a descriptive study.** *Lancet.* 2020; **395**(10223): 507–513.  
[PubMed Abstract](#) | [Publisher Full Text](#) | [Free Full Text](#)
- Eggers M, Eickmann M, Zorn J: **Rapid and Effective Virucidal Activity of Povidone-Iodine Products Against Middle East Respiratory Syndrome Coronavirus (MERS-CoV) and Modified Vaccinia Virus Ankara (MVA).** *Infect Dis Ther.* 2015; **4**(4): 491–501.  
[PubMed Abstract](#) | [Publisher Full Text](#) | [Free Full Text](#)
- Eggers M, Koberger-Janssen T, Eickmann M: **In Vitro Bactericidal and Virucidal Efficacy of Povidone-Iodine Gargle/Mouthwash Against Respiratory and Oral Tract Pathogens.** *Infect Dis Ther.* 2018; **7**(2): 249–259.  
[PubMed Abstract](#) | [Publisher Full Text](#) | [Free Full Text](#)
- Fischer RJ, Morris DH, van Doremalen N, *et al.*: **Assessment of N95 respirator decontamination and re-use for SARS-CoV-2.** *MedRxiv.* preprint, 2020.  
[Publisher Full Text](#)
- Johns Hopkins University: **COVID-19 Dashboard by the Center for Systems Science and Engineering (CSSE).** Accessed 7 May, 2020.  
[Reference Source](#)
- Kawana R, Kitamura T, Nakagomi O, *et al.*: **Inactivation of Human Viruses by Povidone-Iodine in Comparison with Other Antiseptics.** *Dermatology.* 1997; **195**(Suppl 2): 29–35.  
[PubMed Abstract](#) | [Publisher Full Text](#)
- Liao L, Xiao W, Zhao M, *et al.*: **Can N95 Respirators be Reused After Disinfection? How Many Times?** *ACS Nano.* 2020; **14**(5): 6348–6356.  
[PubMed Abstract](#) | [Publisher Full Text](#) | [Free Full Text](#)
- Mantlo EK, Paessler S: **In vitro efficacy of a copper iodine complex PPE disinfectant for SARS-CoV-2 inactivation - Raw Data in CSV.** *figshare.* Dataset. 2020.  
<http://www.doi.org/10.6084/m9.figshare.12493682.v1>
- Qin Y: **Antimicrobial textile dressings in managing wound infection.** In *Advanced Textiles for Wound Care.* edited by S. Rajendran (Woodhead Publishing Series in Textiles) 2009; 179–197.  
[Publisher Full Text](#)
- Sakai M, Shimbo T, Omata K, *et al.*: **Cost-effectiveness of gargling for the prevention of upper respiratory tract infections.** *BMC Health Serv Res.* 2008; **8**: 258.  
[PubMed Abstract](#) | [Publisher Full Text](#) | [Free Full Text](#)
- Society of American Gastrointestinal and Endoscopic Surgeons: **N95 Mask Re-use Strategies.** Accessed 7 May, 2020.  
[Reference Source](#)
- The Centre for Evidence-Based Medicine: **COVID-19 How many Healthcare workers are infected?** Accessed 7 May, 2020.  
[Reference Source](#)
- Wada H, Nojima Y, Ogawa S, *et al.*: **Relationship between Virucidal Efficacy and Free Iodine Concentration of Povidone-Iodine in Buffer Solution.** *Biocontrol Sci.* 2016; **21**(1): 21–27.  
[PubMed Abstract](#) | [Publisher Full Text](#)
- World Health Organization: **Modes of transmission of virus causing COVID-19: implications for IPC precaution recommendations.** Accessed 7 May, 2020a.  
[Reference Source](#)
- World Health Organization: **Coronavirus disease (COVID-19) advice for the public.** Accessed 7 May, 2020b.  
[Reference Source](#)

# Open Peer Review

Current Peer Review Status:  

---

## Version 1

Reviewer Report 18 August 2020

<https://doi.org/10.5256/f1000research.27191.r68324>

© 2020 Dabisch P. This is an open access peer review report distributed under the terms of the [Creative Commons Attribution License](#), which permits unrestricted use, distribution, and reproduction in any medium, provided the original work is properly cited.



### Paul Dabisch

National Biodefense Analysis and Countermeasures Center, Operated by BNBI for the US Department of Homeland Security Science and Technology Directorate, Frederick, MD, USA

This study describes novel data on the efficacy of a copper iodine complex for inactivation of SARS-CoV-2 in liquid suspension. The results demonstrate that the undiluted copper iodine complex causes a significant decrease in viral infectivity in a cell-based microtitration assay after 10 minutes, with greater than a 5-log reduction in 30 minutes. The methodologies and conclusions are generally appropriate. However, there are several limitations to the study:

1. The study only investigates the ability of the copper iodine complex to inactivate the virus in a liquid suspension. Thus, while the present study provides useful preliminary data, additional testing with virus deposited as droplets or aerosol particles on relevant surfaces needs to be conducted.
2. As a justification for the use of copper iodine complex, the authors discuss the incompatibility of certain disinfectants for N95 masks, as well as the difficulty of using other decontamination methods while PPE is being worn. However, while the authors cite some evidence that copper iodine complex is safe on skin, the present study does not perform testing to demonstrate the benefit of copper iodine complex in this regard, specifically its compatibility with N95 masks or ability to be used while PPE is being worn.
3. The manuscript would benefit from additional discussion/comparison of the results obtained in the study to those published for other decontamination methods for SARS-CoV-2, SARS-CoV-1, and MERS.
4. The methods state that a t-test was used for statistical comparisons. However, it is unclear from the text what comparisons were made. In looking at the data, it appears that either a one- or two-way ANOVA with a multiple comparisons post-test would be more appropriate.
5. Regarding data presentation, while Table 1 provides mean values, the standard deviation would also be helpful.

**Is the work clearly and accurately presented and does it cite the current literature?**

Yes

**Is the study design appropriate and is the work technically sound?**

Yes

**Are sufficient details of methods and analysis provided to allow replication by others?**

Partly

**If applicable, is the statistical analysis and its interpretation appropriate?**

Partly

**Are all the source data underlying the results available to ensure full reproducibility?**

Partly

**Are the conclusions drawn adequately supported by the results?**

Yes

**Competing Interests:** No competing interests were disclosed.

**Reviewer Expertise:** My research focuses on the examination of factors influencing transmission of infectious diseases, including the influence of environmental conditions on the persistence of infectious material on surfaces and in aerosols.

**I confirm that I have read this submission and believe that I have an appropriate level of expertise to confirm that it is of an acceptable scientific standard, however I have significant reservations, as outlined above.**

Reviewer Report 06 July 2020

<https://doi.org/10.5256/f1000research.27191.r66377>

© 2020 Frolov I. This is an open access peer review report distributed under the terms of the [Creative Commons Attribution License](#), which permits unrestricted use, distribution, and reproduction in any medium, provided the original work is properly cited.



**Ilya Frolov**

Department of Microbiology, University of Alabama at Birmingham, Birmingham, AL, USA

This manuscript presents new data, which are important to the field and public health. However, to make the results more reproducible by other groups, the authors need to provide the source of Vero cell and catalog number, number of cells seeded into the wells of 96-well plates and to clarify "infection medium."

**Is the work clearly and accurately presented and does it cite the current literature?**

Yes

**Is the study design appropriate and is the work technically sound?**

Yes

**Are sufficient details of methods and analysis provided to allow replication by others?**

Partly

**If applicable, is the statistical analysis and its interpretation appropriate?**

Yes

**Are all the source data underlying the results available to ensure full reproducibility?**

Partly

**Are the conclusions drawn adequately supported by the results?**

Yes

**Competing Interests:** No competing interests were disclosed.

**Reviewer Expertise:** Virology

**I confirm that I have read this submission and believe that I have an appropriate level of expertise to confirm that it is of an acceptable scientific standard.**

---

The benefits of publishing with F1000Research:

- Your article is published within days, with no editorial bias
- You can publish traditional articles, null/negative results, case reports, data notes and more
- The peer review process is transparent and collaborative
- Your article is indexed in PubMed after passing peer review
- Dedicated customer support at every stage

For pre-submission enquiries, contact [research@f1000.com](mailto:research@f1000.com)

**F1000Research**